

LIMITED ONE YEAR WARRANTY

RETAIN THIS PART FOR FUTURE USE
THIS WARRANTY IS ONLY VALID IN THE USA

Kobot® warrants this product for a period of one year from date of purchase against original defects in materials or workmanship. Kobot® will replace (Kobot's option) with the same or equivalent product other than postage. A refund is only available for the first 30 days and only replacement is available after that. This warranty does not cover damage caused by accident, misuse, abuse, or failure to follow instructions contained in your owner's manual. No refunds. Exchanges only.

Warranty Voids:

1. Using the product in any way other than specified in the owner's manual will void the warranty.
2. Opening or tampering with the product's housing will void the warranty.
3. Modifying the product or housing will void the warranty.
4. Failure to operate the product in accordance with the owner's manual will void the warranty.

RETURN INSTRUCTIONS:

1. PLEASE CALL KOBOT'S CUSTOMER SERVICE LINE PRIOR TO RETURNING PRODUCT TO THE STORE OR SEEKING WARRANTY REPLACEMENT. (888) 883-2456
2. When returning a product to Kobot®, please follow the instructions below:
 - a. Pack the product in the original carton or equivalent
 - b. Enclose a copy of the original, dated proof of purchase
 - c. Enclose a note explaining the difficulty you are experiencing with the product. Please be sure to enclose your full name, address, and telephone number.
 - d. We ask a check or money order (no cash) payable to Techko Maid Inc. in the amount of \$10.00 for shipping and handling on your replacement.
 - e. Mail the above to:
Call (888) 883-2456 for mailing address
3. Please allow 4-6 weeks for warranty services.

Customer Service :

(1-888-883-2456)
1-888-87TECHKO
Website: www.techkomaid.com

Mfg. By KOBOT®
MADE IN CHINA

KOBOT®

RV317

Robotic Vacuum & Mopping Machine

OPERATION INSTRUCTIONS



Ability to adjust and run from Hard
Floor to Carpet up to 5/8 inches thick

Before operating this unit, please read all of
the instructions, including important
warranty information.

Patent : 8532821 8744662

Cleaning Modes:

The Kobot® can perform with different cleaning options and various movement patterns to ensure proper cleaning and room coverage.

The Kobot® has 2 buttons for different cleaning options:

Vacuum Plus - Vacuum and even Mop, should you choose to attach the cleaning pad, all at the same time. The robotic vacuum will begin turning debris into its bin compartment. A Blue LED light will indicate this mode.

Carpet - When using on a carpet, please remove the "cleaning pad attachment and side brushes" to free up movement and save on battery power.

Mop Only - Eliminates use of the motor, saving the battery charge or longer mopping times. You must apply the cleaning attachment pad with a cleaning sheet. A Green LED light will indicate this mode.

When the battery power is low, the left LED shines RED.

When the battery is charging, the left LED blinks RED.

When the battery power is full, all LED lights will turn off.

Simply press the preferred mode button, a short musical tone will sound and the Kobot® will begin to move and start cleaning.

As the Kobot® encounters chair legs, furniture and other obstacles, it stops, changes direction and then continues with its cleaning pattern. It will periodically return to areas it skipped and continue on.

Drop offs - When the unit is powered on, you'll notice (2) beams of red lights coming from the bottom of the unit. Depending on the Floor Type Control Switch, these digitally coded light source sensors will detect stairs or other drop offs. The RV317 will back up, maneuver away and get back to cleaning.


The Kobot® will automatically perform various movement patterns during its cleaning process and will change to different movement patterns when needed to ensure room coverage.

Movement Patterns:

Kobot® will automatically perform various movement patterns and change to different movement patterns when needed:


1. Straight walk pattern (Fig. 1 shows straight line movement)

 Fig. 1

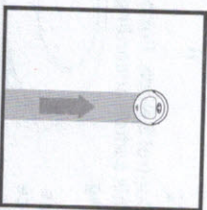


2. Random Pattern: When blocked or at a drop off, the unit will reverse and change movement direction (Fig. 2 shows angle changes)

 Fig. 2

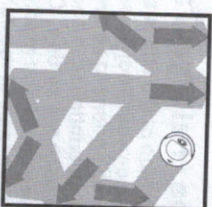


3. Walks along the wall and zig zags (Fig. 3)

 Fig. 3

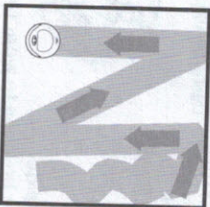

4. Spiral Pattern (Fig. 4)

 Fig. 4

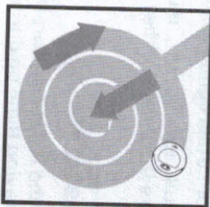

8. Use only the electrical adapter provided by KOBOT®. Using another source may lead to product destruction, electric shock or fires. Do not operate the unit with a damaged power supply cord.

9. For safety, this appliance is not intended for use by children or persons with reduced physical, sensory, or mental capabilities, or lack of experience or knowledge, unless supervised or instructed by a responsible party. Not intended for use by children.

10. Before using this machine, make sure to pick up objects such as clothing toys, papers, pull cords for blinds or curtains, power cords, and any fragile objects that could get knocked over.

11. Always remove the battery before long-term storage or transportation

12. Do not use common household cleaners, lubricants, or alcohol on or near your Kobot®. Do not use aerosols or any products marked flammable. Some agents may combust causing serious injury.

Features:

- * Easy one touch operation
- * Excellent for vacuuming on most carpeted floors
- * Excellent for mopping sealed wood floors, linoleum, tile and marble floors
- * Wet and Dry cleaning capability using disposable cleaning cloths
- * Touch sensitive bumpers won't damage furniture or baseboards
- * Fall prevention: uses patent pending digitally coded light source technology
- * Auto shut off when lifted or stuck
- * Uses preprogrammed and random pattern movements for maximum room coverage
- * Side brush for extended cleaning near walls and tight areas
- * Easy removing waste bin
- * Compact design enables it to work under sofas, beds, and other hard-to-reach areas
- * Rechargeable batteries and AC adapter included